

Beta Clam Press

How to change a Probe

Replacement/Removal of Probe

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove six screws from Rear Cover (pic 1)
2. Disconnect Element wires (pic 2 arrow-a), Probe wires (pic 2 arrow-b) and Earth wire (pic 3) from Controller, taking note of the connections for future reference when reinstalling
3. Lower Heat Plate into down position
4. Remove the four screws retaining the Arm and Heat Plate cover (pic 4)
5. Lift Handle and Lever into the up position
6. Lift off Heat Plate Cover, taking note of the spacers and connections for future reference when reinstalling, finally remove insulation (pic 5)
7. Remove screw securing Ring Probe to Heat Plate (pic 6)
8. Pull Probe wire out through sleeving

Re-installation of replacement Probe

1. Installation is a reversal of removal

