

Beta Clam Press

How to change a Return Spring(s)

Replacement/Removal of Return Spring(s)

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. With Heat Plate in the open position, lay Heat Press on it's side on a soft surface (pic 1)
2. Unlock nuts on the Tie-bolt and loosen (pic 1 arrow-a) to remove tension from the Return Spring(s)
3. Remove Spring from Bolt which is attached to arm (pic 2) and remove from Tie-bolt (pic 1 arrow-b). Finally lift Spring out of Heat Press

Re-installation of replacement Return Spring(s)

1. Installation is a reversal of removal
2. To adjust return pressure, tighten nuts on Tie-bolts until the Heat Plate is held in the up position, then lock nuts together

