

## Mug Press

### How to change a Heating Element

#### Replacement/Removal of Heating Element

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Switch off machine and disconnect from power supply and allow machine to cool
2. Remove rear Cover of Press by unscrewing the seven retaining screws (pic 1)
3. Identify the Heating Element Plug and Socket arrangement, located on the R/H side (pic 2)
4. Separate the two halves of the Plug and Socket by lifting the clasp and pulling apart
5. Remove the silicone and Heating Element assembly from the Stainless Steel Housing, by firstly lifting one end clear of the retainers (pic 3), then secondly by gently easing the rest of the Heating Element out (pic 4)
6. Once clear remove the Heating Element from the Press, carefully pulling the wiring through the Partition Panel within the Press

#### Re-installation of replacement Heating Element

1. Installation is a reversal of removal

