

## Beta Swift Heat Press

### How to change a Fuse Holder(s)

#### Replacement/Removal of Fuse Holder(s)

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove six screws from Base Board (pic 1)
2. Remove Base Board from Casting
3. Remove wires connected to Fuse Holder(s) (pic 2 arrow-a), taking note of the connections for future reference when reinstalling new Fuse Holder(s)
4. Using an 18 mm spanner, undo locking Nuts securing Fuse Holder(s) to Casting (pic 2 arrow-b)

#### Re-installation of replacement Fuse Holder(s)

1. Installation is a reversal of removal

