

Beta Swift Heat Press

How to change a Micro Switch

Replacement/Removal of Micro Switch

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove six screws from Base Board (pic 1)
2. Remove Base Board from Casting
3. Remove wires connected to Micro Switch (pic 2 arrow-a), taking note of the connections for future reference when reinstalling new Micro Switch
4. Unscrew the two screws securing Micro Switch to Casting (pic 2 arrow-b)

Re-installation of replacement Micro Switch

1. Installation is a reversal of removal

