

Cap-Pocket Combo Heat Press

How to change the Arm Springs

Replacement/Removal of Arm Springs

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. With Lever Handle in the up position, remove the Arm Springs from Spring Hooks using a pair of Long Nose Pliers (pic 1)
 2. Remove Springs from Arm (pic 2)

Re-installation of replacement Arm Springs

1. Installation is a reversal of removal

