

## Delta Cap Press

### How to change Arm Spring(s)

#### Replacement/Removal of Arm Spring(s)

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Put Heat Plate into the up position
2. Remove Arm Spring(s) from Spring Hooks using a pair of Long Nose Pliers (pic 1)
3. Remove Arm Spring(s) from Arm

#### Re-installation of replacement Arm Spring(s)

1. Installation is a reversal of removal

