

## Delta Junior Heat Press

### How to change a Rheostat

#### Replacement/Removal of a Rheostat

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Put Heat Plate in down position
  2. Remove Rheostat Knob by loosening grub screws (pic 1) and pulling Knob off Rheostat
  3. Remove Heat Plate bolts and brackets (pic 2)
  4. Lift Handle and Lever into the up position
  5. Lift off Heat Plate Cover and spacer (pic 3), taking note of their position for future reference when reinstalling
  6. Remove nuts holding connections onto Rheostat (pic 4 arrow-a)
  7. Remove Rheostat securing screws (pic 4 arrow-b) and Lift Rheostat from Heat Plate

#### Re-installation of a replacement Rheostat

1. Installation is a reversal of removal
- N.B.** Before you reinstall Rheostat Knob you need to reposition stop tabs on Rheostat for minimum and maximum temperature settings and recalibrate Heat Press. You will need a CAL Meter to make this adjustment

