

Major/Minor Heat Press

How to change a Fuse Holder(s) fitted in Instrument Cover - Newer Machine models

Replacement/Removal of Fuse Holder(s)

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove the four Socket Head screws, holding the Instrument Cover in place with a 4 mm Allen key (pic 1)
2. Lift up Instrument Cover from back of Press
3. Disconnect wiring connected to Fuse Holder(s) (pic 2 arrow-a), taking note of the connections for future reference when reinstalling
4. Using an 18 mm spanner, undo locking nuts (pic 2 arrow-b) holding Fuse Holder(s) in Instrument Cover
5. Remove Fuse Holder(s)

Re-installation of replacement Fuse Holder(s)

1. Installation is a reversal of removal

