

Major/Minor Heat Press

How to change a Solenoid Valve

Replacement/Removal of Solenoid Valve


- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Place Press on it's right-hand side, on a flat, soft surface
 2. Unscrew the ten Rubber Feet from the Base Board and remove (pic 1)
 3. Lift Base Insulation Board from Press
 4. Disconnect Air and Electrical connections from Solenoid Valve, taking note of the connections for future reference when reinstalling (pic 2 arrow-a)
 5. Remove screws securing Solenoid Valve to Base (pic 2 arrow-b)

Re-installation of replacement Solenoid Valve

1. Installation is a reversal of removal



pic 1

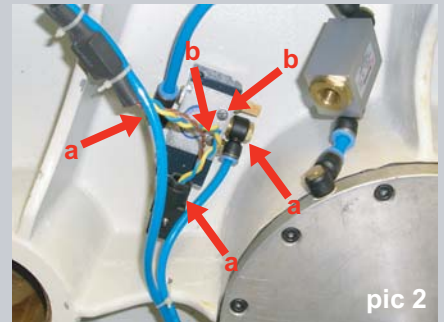

pic 2