

## Maxi/Mini Heat Press

### How to change a Fuse Holder(s)

#### Replacement/Removal of Fuse Holder(s)

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove pin from pressure handwheel using 4mm punch (pic 1)
2. Unscrew handwheel anti clockwise from adjusting stud (pic 2)
3. Remove the two socket head screws (front and side) holding the instrument cover, with 4mm Allen key (pic 3)
4. Lift up instrument cover from the back of press (pic 4)
5. Disconnect wires connected to Fuse Holder(s) taking note of the connections for future reference when reinstalling
6. Using an 18 mm spanner to undo locking nut(s) (pic 4 arrow-a) remove Fuse Holder(s) from opening in instrument cover

#### Re-installation of Fuse Holder(s)

1. Installation is a reversal of removal

