

## Maxi/Mini Heat Press

### How to change a Heat Plate Spring

#### Replacement/Removal of Heat Plate Spring

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Make sure the Heat Plate is in the up position (pic 1)
  2. Using an 8 mm spanner, unlock nut on Heat Plate Spring bolt (rear of Heat Plate) (pic 2 arrow-a)
  3. Unscrew bolt from Heat Plate (pic 2 arrow-b)
  4. When bolt is fully removed, slide top of spring off hook attached to Fabricated Arm (pic2 arrow-c)

#### Re-installation of Heat Plate Spring

1. Installation is a reversal of removal, making sure to slide spring onto hook on Fabricated Arm before screwing bolt back into Heat Plate

