

## Maxi/Mini Heat Press

### How to change an Inner Pin

#### Replacement/Removal of Inner Pin

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove screws and toggle cover from press (pic 1)
2. Remove circlip from inner ring (pic 2 arrow-a)
3. Using a 10 mm punch remove old Inner Pin (pic 2 arrow-b)

#### Re-installation of Inner Pin

1. Installation is a reversal of removal

