

Maxi/Mini Heat Press

How to change a Pivot Plate and Toggle Lock Cam

Replacement/Removal of Pivot Plate and Toggle Lock Cam

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Machine build specification 1 - Remove grub-screw from Yoke (pic 1a arrow-a)
2. Using a 10mm punch remove Yoke pin (pic 1a arrow-b)
3. Machine build specification 2 - Remove Circlip from Yoke pin (pic 1b arrow-a)
4. Using a 10mm punch remove Yoke pin (pic 1a arrow-b)
5. Remove circlip from outer pin (pic 2)
6. Using a 10mm punch remove outer pin (pic 3)
7. lift complete toggle parts from between left right pivot arm
8. Remove two countersunk screws to dismantle assembly, taking note of the position of spacers for future reference when reinstalling

Re-installation of Pivot Plate and Toggle Lock Cam

1. Installation is a reversal of removal taking care to grease the new parts before re-assembly

