

## Maxi/Mini Heat Press

### How to remove a Stop Block and fit a new Stop Bar

#### Replacement/Removal of Stop Bar

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Remove Socket Head screw from Stop block using a 6 mm Allen key (pic 1)
  2. Lift block away from Pivot Arm (pic 2)
  3. Secure end of Stop Bar in a vice (pic 3)
  4. Remove Knurled Knob anti clockwise from Stop Bar (pic 4)
  5. Separate parts, taking note of location of Pressure Spring for future reference when reinstalling

#### Re-installation of Stop Bar

1. Installation is a reversal of removal

