

Omega Series 1000-1001 Heat Press

How to change a Directional Valve

Replacement/Removal of a Directional Valve

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Slide Shut-Off Valve to the right to turn air off (pic 1)
2. Remove the eight screws securing the Rear Box Lid and lift off from Rear Box (pic 2)
3. Move Lever to the right on the Release Valve to vent the air from the reservoir (pic 3)
4. Remove all air pipes from Directional Valve (pic 4), taking note of all connections for future reference when reinstalling
5. Remove screws securing Directional Valve

Re-installation of replacement Directional Valve

1. Installation is a reversal of removal

