

Omega Series 1000-1001 Heat Press

How to operate the Filter/Regulator and Shut-Off Valve

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Lift the Black Knob on Filter/Regulator (pic 1 arrow-a)
2. Rotating clockwise turns air pressure up whilst rotating anticlockwise turns air pressure down
3. Place Black Knob back down when desired pressure is set
4. Sliding Shut-Off Valve to the right turns air pressure off to Heat Press whilst sliding to the left turns air pressure on to Heat Press (pic 1 arrow-b)

