

Omega Series 1000-1001 Heat Press

How to operate the Release Valve

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Slide Shut-Off Valve to the right to turn air off
2. Remove the eight screws securing the Rear Box Lid and lift off from Rear Box (pic 1)
3. Move lever to the right on Release Valve to open, allowing the air to vent from the Reservoir (pic 2)
4. You can now replace any air fittings as required
5. Move Lever to the left to close Release Valve and replace the eight screws securing the Rear Box Lid
6. Slide Shut-Off Valve to the left to turn air on
7. The Heat Press is now ready for operation

