

Studio Auto Clam Senior/Junior Press

How to change a Magnet

Replacement/Removal of a Magnet

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Unscrew Retaining Ring in an anticlockwise direction and pull Plug out of Socket (pic 1 arrow-a)
2. Remove P-Clip securing wire (pic 1 arrow-b)
3. Using a Screwdriver remove 2 Heat Press Bracket screws securing Magnet (pic 2)
4. Remove screws holding Magnet Cover and Lift off (pic 3)
5. Remove screw securing Magnet to Holding Plate taking note of Spacer position, for future reference when reinstalling

Re-installation of replacement Magnet

1. Installation is a reversal of removal
- N.B.** When inserting Plug into Socket be careful to align Locating Groove with raised Key in Socket

