

Studio Auto Clam Senior/Junior Press

How to change an On/Off Rocker Switch

Replacement/Removal of an On/Off Rocker Switch

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Separate Electrical Box by unscrewing 4 screws (pic 1 & inset)
2. Lift the top half of Electrical Box upwards and pivot towards front of Press (pic 2)
3. Slide On/Off Rocker Switch out of Electrical Box (pic 3)
4. Remove On/Off Rocker Switch wires (pic 4), taking note of the connections for future reference when reinstalling

Re-installation of replacement On/Off Rocker Switch

1. Installation is a reversal of removal

