

Studio Auto Clam Senior/Junior Press

How to change a Reset Switch

Replacement/Removal of a Reset Switch

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Separate Electrical Box by unscrewing 4 screws (pic 1 & inset arrow-a)
2. Lift the top half of Electrical Box upwards and pivot towards front of Press (pic 2)
3. Remove Reset Switch locking ring (pic 1 arrow-b)
4. Pull Reset Switch out from Electrical Box location hole
5. Remove Reset Switch wires (pic 3), taking note of the connections for future reference when reinstalling

Re-installation of replacement Reset Switch

1. Installation is a reversal of removal

