

## Studio Clam 28-38 Press

## How to change the Temp/Timer Display Units

## Replacement/Removal of the Temp/Timer Display Units

- Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
- Remove Rear Cover by unscrewing 8 retaining 1. screws (pic 1)
- 2. Move locking tabs on Ribbon Cable connection and pull connection out from Display Unit (pic 2)
- 3. Push Display Unit securing tabs down (pic 3) and remove Display Unit forward from Machine Case

## Re-installation of replacement Temp/Timer Display Units

- 1. Installation is a reversal of removal
- N.B. Make sure Ribbon Cable connection is located correctly in Display Unit





