

Studio Clam Press

How to change a Return Spring(s)

Replacement/Removal of Return Spring(s)

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. With Heat Plate in the open position, lay Heat Press on it's side on a soft surface (pic 1)
2. Unlock 19mm Nuts (pic 1 arrow-a) and remove from Base Stud (pic 1 arrow-b)
3. Lift Spring off Stud (pic 1 arrow-b) and remove Spring from Arm Bolt (pic 2)

Re-installation of replacement Return Spring(s)

1. Installation is a reversal of removal

