

## Studio Clam Press

### How to change a Rocker Switch

#### Replacement/Removal of Rocker Switch

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove six screws from Rear Cover (pic 1)
2. Remove Rear Cover from Instrument Cover
3. Lift up tabs (on Both sides) of Retaining Bracket (pic 2) and push Digital Heat Controller forward
4. Disconnect wires from Rocker Switch, taking note of the connections for future reference when reinstalling (pic 3)
5. Push Rocker Switch out from Instrument Cover (pic4)

#### Re-installation of replacement Rocker Switch

1. Installation is a reversal of removal

