

Studio Plate Press

How to change a Micro Switch

Replacement/Removal of a Micro Switch

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove Back Cover and 6 screws (pic 1)
2. Cut cable ties holding Micro Switch wires (pic 2 arrow-a)
3. Remove Micro Switch connector from Controller by pulling Plug upwards (pic 3)
4. Remove screws securing Micro Switch (pic 2 arrow-b) and remove from Cast Body

Re-installation of replacement Micro Switch

1. Installation is a reversal of removal
- N.B.** When refitting Micro Switch slide it up and down for correct adjustment for differing plate sizes and to allow the counter to function correctly

