

**ADKINS**

**ADKINS**  
HEAT PRESS TECHNOLOGY

**BETA POCKET**



# Operators Handbook

Rev B - 03/12/18

All products within the ADKINS range are labelled with CE marking and are manufactured and tested to comply with EC safety regulations.

©2018 A. Adkins & Sons Ltd. All rights reserved. E&OE. V1.0.

# Preface

---

Dear User

**Welcome to the growing group** of Adkins Beta Pocket Press users. The product you have purchased has been carefully designed and manufactured to ensure that you, the user, will gain the maximum benefit.

**All Adkins products** are specifically designed to ensure ease of use with particular attention to safety requirements.

**Should you discover any fault** or damage upon receipt of this product, you should immediately contact your supplier.

---

# Contents

---

<b>1.</b>	<b>Introduction Beta Pocket Press</b>	<b>1</b>
1.1	What did you receive?	2
1.2	Specifications of the Beta Pocket Press	3
1.3	Safety	4
1.4	Safety tips	4
<b>2.</b>	<b>Installation</b>	<b>6</b>
2.1	Transport instructions	6
2.2	Installing the machine	6
2.3	Electrical requirements	6
2.4	Adjusting the pressure	7
<b>3.</b>	<b>How to operate the Beta Pocket Press</b>	<b>8</b>
3.1	Starting with the Beta Pocket Press	8
3.2	Working with heat transfer materials	8
3.3	Material fusing	9
3.4	Pressing pad assembly	10
3.5	Shutting down the machine	10
3.6	Fault diagnosis	11
3.7	Hints and tips	11
<b>4.</b>	<b>Maintenance of the Machine</b>	<b>13</b>
4.1	Daily maintenance	13
4.2	Periodic maintenance	13
4.3	Cleaning	13
4.4	Interchangeable size Platen	13
<b>5.</b>	<b>Machine Drawings, Diagrams and Declaration</b>	<b>14</b>
5.1	General layout	15
5.2	Control unit operation	16
5.3	Exploded diagram and parts list	17
5.4	Machine electrical schematic	18
5.5	Controller wiring diagram	19
<b>6.</b>	<b>Design Change</b>	<b>20</b>
<b>7.</b>	<b>Guarantee (Limited Warranty)</b>	<b>21</b>
<b>8.</b>	<b>Declaration of Conformity</b>	<b>22</b>

---

# 1. Introduction Beta Pocket Press

---

**The Beta Pocket Press** was originally produced for the laundry industry, but is now used in a wider market for transferring onto pockets and sleeves. Two sizes of worktable are available. This simple robust machine is powered by a microprocessor for control of both heat and dwell accuracy and ease of operation and requires minimal operating space.

**The Beta Pocket Press** is produced in one version, nominally 230 Volts AC for the European market.

Two sizes of table are supplied as standard unless by arrangement.

## 1.1 What did you receive?

---

**The Beta Pocket Press has been shrink wrapped**, placed in a box, and held in place with foam. The following articles should have been delivered:

- Beta Pocket Press complete with mains cable and plug
- Beta Pocket Press Users' Handbook
- Any extra items ordered

**If there is any damage** or any article is missing, please contact your supplier immediately.

## 1.2 Specifications of the Beta Pocket Press

---

**The Beta Pocket Press is a manually operated** heat press for transfer printing and material fusing. It is ideal for medium volume production.

**The work area** of the Beta Pocket Press is 10 x 8 cm (*4 x 3 in*) or 8 x 6.5 cm (*3 x 2.5 in*).

### Specifications

Power consumption	0.5 kW
Power supply	230 Volts AC
Working temperature	70 - 235°C
Display timer range	0 – 9.59 min
Machine height open	80 cm ( <i>31.5 in</i> )
Machine height closed	43 cm ( <i>17 in</i> )
Machine width	28 cm ( <i>11 in</i> )
Machine depth	52 cm ( <i>20.5 in</i> )
Working area required	52(L) x 28(W) x 80(H) cm ( <i>20.5(L) x 11(W) x 31.5(H) in</i> )
Press pad dimensions	10 x 8 cm ( <i>4 x 3 in</i> ) or 8 x 6.5 cm ( <i>3 x 2.5 in</i> )
Net weight	15 Kg ( <i>33 lbs.</i> )
Gross weight	18 Kg ( <i>39.5 lbs.</i> )
Fuses	3.15A
A-weighted noise level	<70dB(A)

### 1.3 Safety

---

**The Beta Pocket Press has been equipped** with various safety features to ensure operator safety.

- a. **A thermal cut-out** on the heating element shuts off the power to the element if the temperature exceeds  $235^{\circ}\text{C} \pm 15^{\circ}\text{C}$  ( $455^{\circ}\text{F} \pm 27^{\circ}\text{F}$ ).
- b. **The time/temperature** controller has a built in facility giving error messages in the event of faults with the element heating and control system.

### 1.4 Safety Tips

---

**Our customer service department** has its own service engineers and, if required, maintenance and advice is available.

- ◆ **The Beta Pocket Press** meets the European Legislation standard. Under normal conditions accidents are rare. However listed below are some practical points to ensure your safety.
    - **Always switch off** the current (and pull plug out of the socket) when undertaking maintenance work or when cleaning the machine.
    - **Keep other people** away from the machine during use.
    - **Ensure that there is** sufficient space around the machine. Cables and connections must not get jammed. Although the heat radiation of the press is low, there should be enough space for cooling down.
    - **Avoid contact** with the press element.
  - ◆ **DO NOT REMOVE THE BASE BOARD OR CONTROLLER UNLESS QUALIFIED TO DO SO** - touching internal parts is dangerous and may cause shock hazard. All electrical connections inside covers are live. Never operate Press with any covers and/or guards removed.
  - ◆ **PROTECT THE MAINS CABLE** - damage to the mains cable may cause fire or shock hazard. When unplugging, hold by the plug only and remove carefully. Take care that the mains cable does not come into contact with the heat plate (or moving parts of the mechanism) during operation of the machine.
-

## Safety Tips (cont.)

---

- ◆ **OPERATING AMBIENT TEMPERATURE RANGE** - the operating ambient temperature range is 0°C - 35°C, (32°F - 104°F) for a relative humidity of 20 - 80%. This heat press is fitted with a thermal cut out to ensure that it cannot operate above 235°C ± 15°C (455°F ± 27°F).

- ◆ **MACHINE FUSE(S)** - type: ultra rapid (FF) fuses 1¼" 230 Volts AC max. 3.15 Amps.

- ◆ **WARNING - THIS APPARATUS MUST BE EARTHED (GROUNDED)**

- ◆ **CAUTION**  
This machine gets hot whilst operating. Take care not to touch any surfaces that are labelled "Caution this plate is HOT".

- ◆ **MACHINE OPERATION**  
**Only suitable persons trained to do so should operate this machine.**

**This machine is designed to be operated by one operator only.**

**Use both hands** to move the handle up or down for safety.

**Keep fingers** away from **trapping points** in the arm-lever toggle mechanism. Using both hands on the handle keeps the hands safe.

**Do not** allow the handle to move upward, by the effect of the springs, use both hands to control movement.

**Contact** your print media supplier to ascertain whether fumes are given off during the transfer process, and if so what precautions are needed for operator safety, these may include air extraction, and / or mask for personnel.

**Please refer to Page 15 for an illustration of the Beta Pocket Press machine.**



## 2. Installation

---

### 2.1 Transport instructions

---

**The machine comes to you** in a box. If you have to transport the machine at any time it is recommended that you use a similar box and packing methods. Please let the machine cool down and lower the handle to the locked position.

### 2.2 Installing the machine

---

2.2.1 **Remove all** packaging from the heat press.

2.2.2 **Check to ensure** that no damage has been caused to the machine during transit.

2.2.3 **Place the machine** on a sturdy horizontal surface that is within easy reach of the operator and allow space for the handle to move up to the loading position. Ensure that no items vulnerable to heat radiation are too close to the machine and that local lighting is adequate.

### 2.3 Electrical requirements

---

**The Beta Pocket Press should** be connected to the mains supply, (nominally 230-240 Volts AC for the European Market by the mains cable provided and a suitable plug. A qualified person should carry out this work.

**The press is designed** for 230-240 Volts AC  $\pm$  50/60 hertz and requires exclusive use of a power outlet rated for at least 10 amps (Europe).

**Ensure that** the supply rating on the machine specification plate corresponds with your local supply and that the correct plug is fitted.

#### **MAINS LEAD**

**The wires** in this mains lead are coloured in accordance with the following code:

230 VAC { **Green and Yellow: EARTH**  
**Blue: NEUTRAL**  
**Brown: LIVE**

## Electrical requirements (cont.)

---

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

1. **The wire coloured green and yellow** must be connected to the terminal in the plug, which is marked by the letter E, or by the safety earth symbol coloured green, or green and yellow.
2. **The wire coloured blue** must be connected to the terminal, which is marked with the letter N, (Neutral Connector).
3. **The wire coloured brown** must be connected to the terminal, which is marked with the letter L, (Live Connector).

**NOTE:**

**Replacement of the mains cable** must be done by a competent service engineer.

**HEATING ELEMENT**

**The heating element** fitted to this press is rated at 0.50 kW.

**Never connect** to any outlet or power supply having a different voltage/frequency from that on the machine data plate.

## 2.4 Adjusting the pressure

---

**This press is fitted** with a pressure-adjusting unit, which enables the heat plate assembly to be raised or lowered by use of a pressure adjustment knob located on the top of the machine:

- a) **To increase pressure** or to use thinner materials turn knob clockwise.
- b) **To decrease pressure** or to raise the heat plate assembly to enable thicker materials to be used, turn the adjustment knob anticlockwise.

**NOTE**

**DO NOT adjust the pressure when the machine is clamped shut**

**CAUTION**

**Never increase the pressure to the extent of requiring undue force to lower the toggle/heat plate assembly into the lock position, as this will place excessive stress on the press frame, resulting in permanent damage to the press and possible injury to the operator.**

**Please refer to Page 16 showing the operation of the control unit.**

---

## 3. How to Operate the Beta Pocket Press

---

### 3.1 Starting with the Beta Pocket Press

---

#### 3.1.1 Plug into your supply outlet and switch supply on.

**N.B.** Please ensure the mains plug is easily accessible to the operator so that in the event of a fault the machine can be unplugged.

#### 3.1.2 Turn on the Beta Pocket Press; the on/off switch is to the right of the controller. Set the machine controls as necessary. See instructions for adjusting the pressure, **Paragraph 2.4**, and the operation of the time temperature unit, **Page 16**. When the set temperature is steady in the display the machine is ready to use.

### 3.2 Working with Heat Transfer Materials

---

**This section** is divided into Transfer Marking/Transfer Printing and Heat Bonding and Fusing.

**First ascertain from the supplier** of the material that it is suitable to be used, and obtain the correct heat and time dwell setting for the material and transfer.

**Approximate settings may be as follows:-**

#### 3.2.1 Transfer Marking

200°C (392°F) - Heat setting 3 to 5 seconds - Time dwell setting
---

**NOTE: Transfer marking** is usually for the marking of materials for identification purposes and should not be confused with the transfer printing, as mentioned in the next section.

#### 3.2.2 Transfer Printing

190°C-200°C (374°F-392°F) - Heat setting 20 to 30 seconds - Time dwell setting
---

## Working with Heat Transfer Materials (cont.)

---

**NOTE:** Always ascertain from the supplier of material and transfer paper, that the material to be used is suitable for, and has been prepared for transfer printing.

### 3.2.3 Heat Bonding - Fusing

140°C-200°C (284°F-392°F) - Heat setting 5 to 15 seconds - Time dwell setting
--

**3.2.4** Ensure that the heat setting and dwell time setting are correct for the material being used.

**3.2.5** Adjust the pressure setting of the machine by rotating the adjusting knob situated at the rear of the machine. (See exploded diagram in this manual.) Clockwise for more pressure, anticlockwise for less pressure.

**3.2.6** Adjust the position of the silicone pad table to align with the heat plate by loosening the locking knob situated underneath the silicone pad table, positioning it as required (front to back) and retightening the locking knob.

**3.2.7** Lay the fabric to be transfer printed on the work table, removing all wrinkles.

**3.2.8** Place the transfer paper in the desired position on top of the fabric.

**3.2.9** Gently pull the handle forward into the lock position using both hands for safety and ensuring that the work is firmly clamped between the heat plate and the pressure pad.

**3.2.10** When the pre-set dwell time has been reached, a buzzer will sound. The heat plate should then be lifted by pushing the handle back to its full extent using both hands if the machine lifts from the table, the pressure is adjusted too high.

**3.2.11** For safety reasons, it is necessary to push the handle into the locked position after it is lifted. This will ensure the accidental lowering of the heat platen handle.

### 3.3 Material Fusing

---

**3.3.1** When the press is to be used for the fusing of fusible interlining/heat bonding etc., ascertain from the supplier of the material to be used, the correct settings for time and temperature for the process.

---

## Material Fusing (cont.)

---

**Approximate settings are usually within the following:-**

120°C-170°C (284°F-338°F) - Heat Setting 5 - 30 seconds - Time Dwell Setting
---

**The method of operation** for fusing is the same as for transfer printing.

**During the fusing operation** it will be found to be advantageous to lay a piece of PTFE cover material (the same size as the heat plate), over the article being fused. This will act as an anti-stick barrier to prevent strike through of any surplus adhesive from the fusible materials adhering to the heat plate of the press.

**NOTE:**

**It is not advisable** that this PTFE cover material be used when the press is being used for transfer printing.

### 3.4 Pressing Pad Assembly

---

**The pressing pad** normally supplied with this machine is silicone rubber. The pressing pad must be maintained in good condition at all times and replaced when showing signs of wear. A worn pressing pad will always affect the quality of printing/fusing. Do not insert items into the machine, which would tend to cut the pressing pad, i.e. buttons, pins, press-studs or zips.

**Never allow** the hot heat plate to rest on the pressing pad when the press is not being used as the pad may be damaged.

**IMPORTANT NOTE:**

**The pressing pad** supplied with the machine is of the correct thickness. Using a thicker pad may invalidate your warranty.

### 3.5 Shutting Down the Machine

---

**To shut down the machine**, turn off the green illuminated rocker switch to the right of the controller. The handle should be in the up position.

**After shutting off the machine** it should not be switched on again for 30 seconds.

## 3.6 Fault Diagnosis

---

**This machine** has a built in fault diagnosis. The display may show the following:

1. **H-F**

**If the element** of the heat press, or the thermal cut-out go open circuit, after approximately 20 minutes the display will show “Heat Fault”, and a buzzer will sound. If this display is seen, contact your machine supplier immediately.

2. **P-F**

**If the probe** goes open circuit, the display will show “Probe Fault” immediately, and a buzzer will sound. Contact your machine supplier immediately.

### CAUTION

**In all fault conditions** switch off the power to the machine and unplug the machine from the electrical supply before contacting your machine supplier.

## 3.7 Hints and Tips

---

### Transfer Printing

**Extra care** should always be taken to ensure that transfer paper is placed print down onto the article, as mistakes will result in the heat plate becoming soiled with ink and spoiling following work.

**When transfer printing**, it may be found to be advantageous to cover the press pad with paper to prevent strike-through of surplus ink, particularly when printing thin material as surplus print on the pressing pad cover can also strike back on the following work.

### Transfer Paper/Motifs Fail to Print Out Correctly

**Check:-**

1. **Heat and time** dwell settings are correct.
2. **Article** having transfer applied is locked in contact between pressing pad and heat plate.
3. **Pressing pad** is in good condition, and is making complete contact over the whole area of the heat plate. See Pressing Pad details.

### “Ghosting” (Double Image) of Transfer Prints

## Hints and Tips (cont.)

---

### Check:-

1. **Material being used** has been correctly heat set for transfer printing.
2. **Material being used** does not shrink during printing process, i.e. measure material before and after printing.
3. **Transfer paper** does not move after printing process upon lift off of the heat plate.
4. **If possible**, use adhesive coated paper, particularly to overcome fabric shrinkage.
5. **By pre-shrinking** of material in press before transfer printing.

## 4. Maintenance of the Machine

---

### 4.1 Daily Maintenance

---

**For good press results** it is important to keep the press surfaces clean. Wipe the surface of the heat plate with a dry non-abrasive cloth before use when the plate is cold.

When heat plates are hot and not in use, keep open position away from the silicone pad.

### 4.2 Periodic Maintenance

---

**Put a few drops of oil** onto the various pivot pins and the pressure adjusting screw every three months.

Periodically clean the TEFLON® coated heat elements with a non-abrasive piece of cloth. Stubborn stains may be cleaned, when the elements are cool, with mineral spirits.

### 4.3 Cleaning

---

**First unplug the machine.** Clean the outside of the machine frequently with a clean, moist cloth. This may conveniently be carried out before starting when the machine is cool.

To prevent soiling of substrate, periodic wiping of entire exterior machine, including platens, with a clean rag is recommended. If necessary, use mineral spirits for cleaning a cold machine. Since mineral spirits are flammable, use precautions at all times and keep away from sparks, flames or hot heat platen.

### 4.4 Interchangeable size platen areas

---

#### **How to do it?**

To exchange one size pad plate and pad for another, unscrew the knurled knob **27** on Exploded Diagram (**Page 17**), remove the pad plate and pad substitute the new pad plate and pad screw on the knurled knob. Adjust the fore and aft position as required.




## **5. Machine Drawings, Diagrams and Declarations**

---

On the following pages are the schematic diagrams for the Beta Pocket Press machine.

- 5.1 General Layout..... Page 15**
- 5.2 Control Unit – Operation ..... Page 16**
- 5.3 Exploded Diagram and Parts List ..... Page 17**
- 5.4 Electrical Diagram ..... Page 18**
- 5.5 Controller - Electrical Diagram ..... Page 19**

## 5.1 General Layout of the Beta Pocket Press

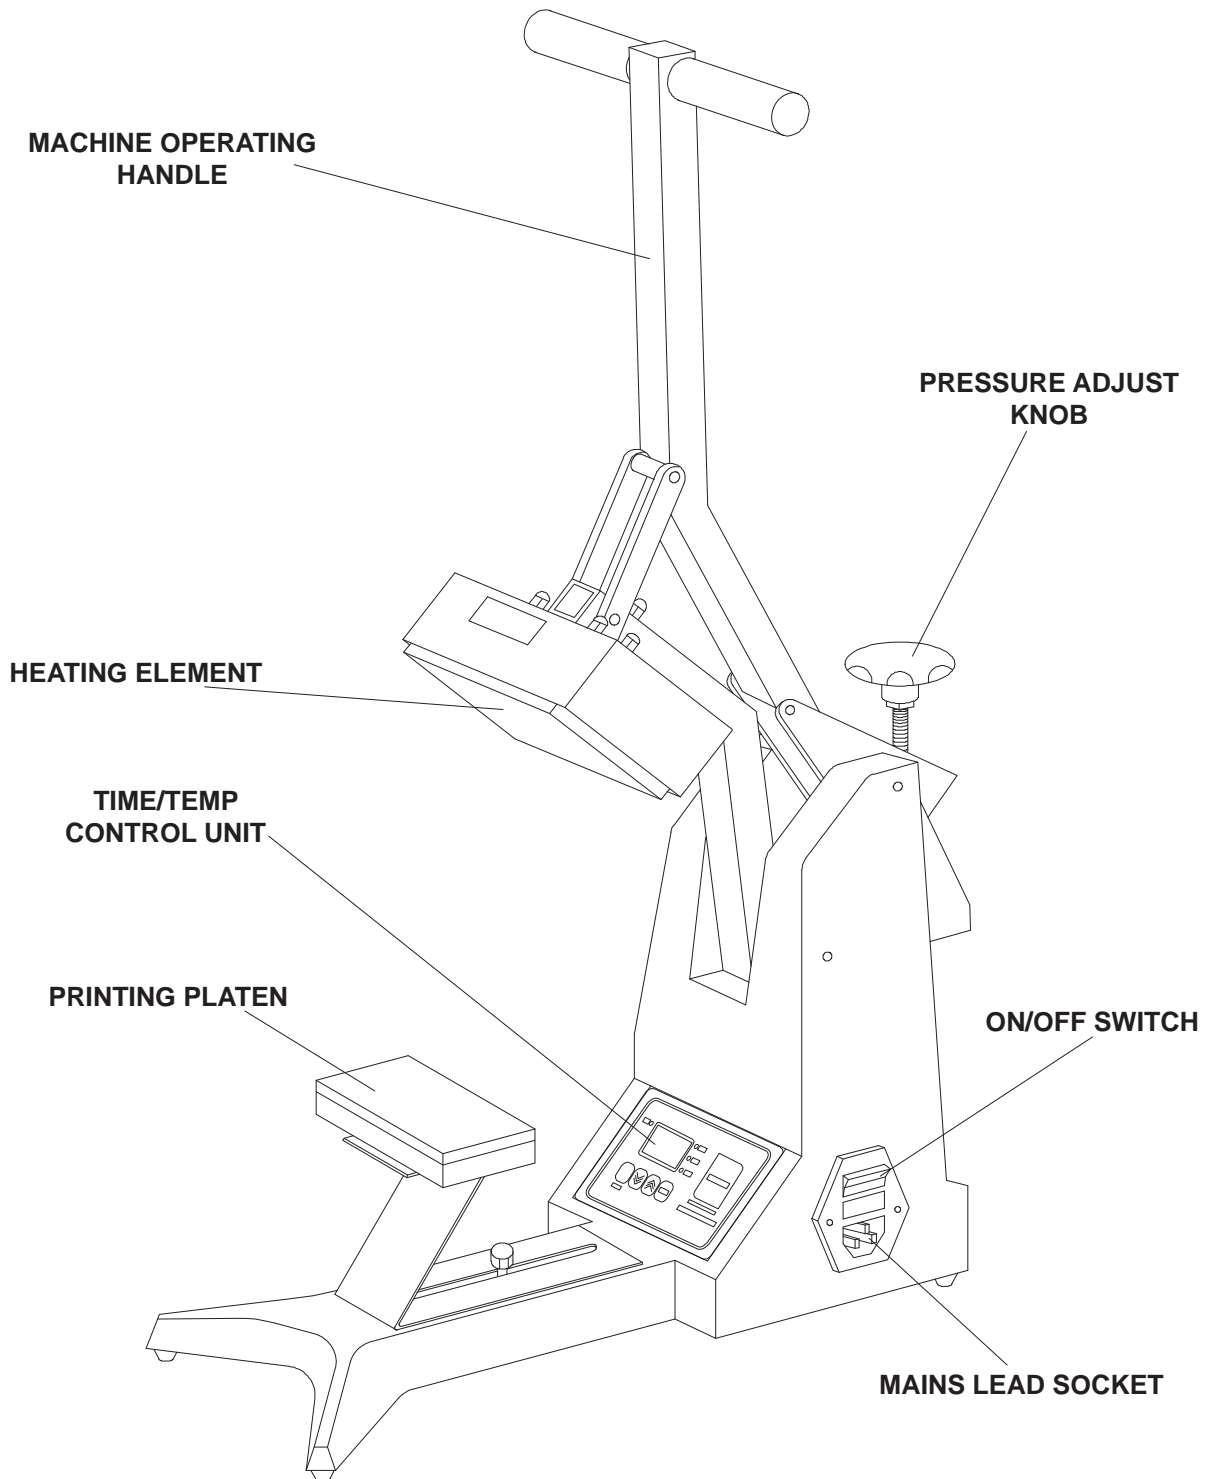


## 5.2 Operation Of Control Unit, Setting Time and Temperature

(The head must always be in the up position before the controller is set)



### Setting Temperature


1. Switch on Press; Display and 'TEMP' indicator will light up.
2. Press 'MODE' button to select 'Set' on indicator.
3. The Display will start flashing.
4. Use the 'UP' and 'DOWN' arrow buttons to set the required temperature.
5. When you have set the required temperature the Display will stop flashing and the 'SET' indicator will go out.
6. Press the 'ON/OFF' button to start the Press heating to the selected temperature. The 'ACT' indicator will light up.

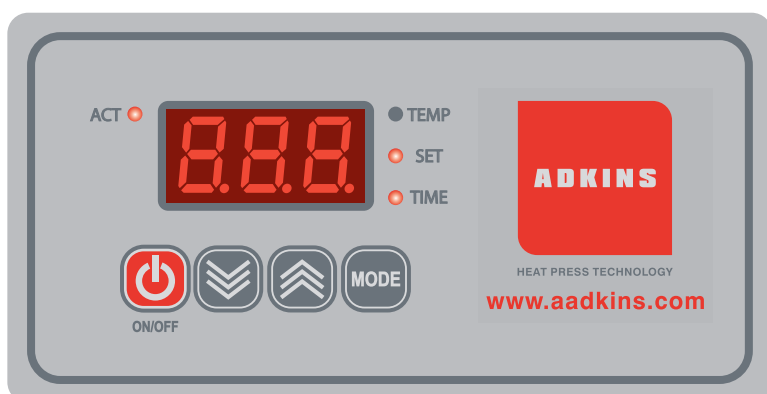

### Setting Time


1. Switch on Press; Display and 'TEMP' indicator will light up.
2. Press 'MODE' button twice to select 'SET' and 'TIME' on indicator.
3. The display will start to flash.
4. Use the 'UP' and 'DOWN' arrow buttons to set the required time.
5. When you have selected the required time the Display will stop flashing and the 'SET' and 'TIME' indicators will go out.
6. Press the 'ON/OFF' button to start the Press. The 'ACT' indicator will light up.

## 5.3 Exploded Diagram and Parts List

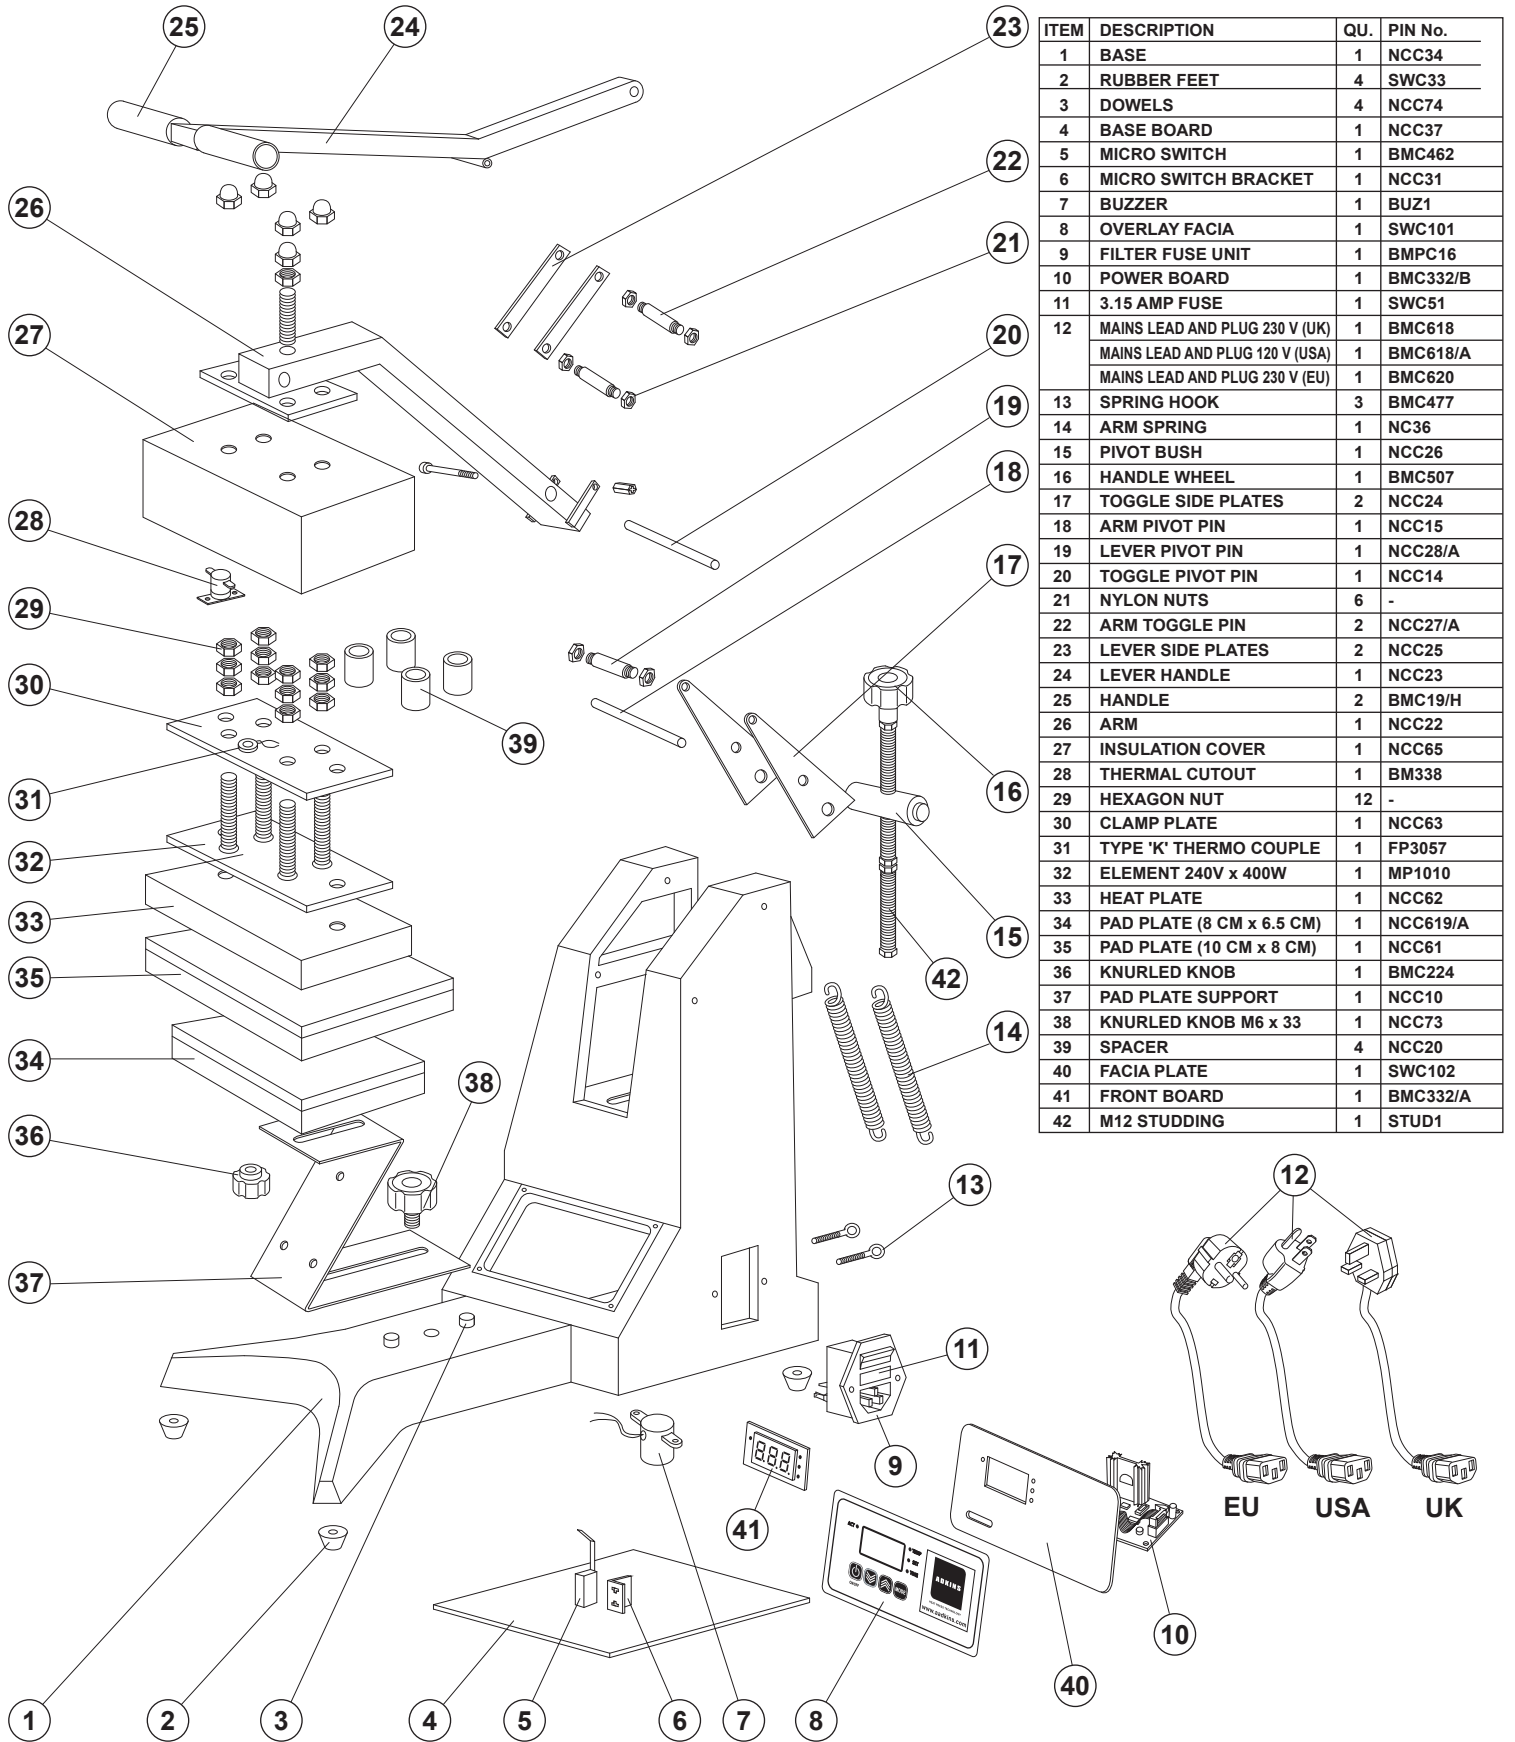


ITEM	DESCRIPTION	QU.	PIN No.
1	BASE	1	NCC34
2	RUBBER FEET	4	SWC33
3	DOWELS	4	NCC74
4	BASE BOARD	1	NCC37
5	MICRO SWITCH	1	BMC462
6	MICRO SWITCH BRACKET	1	NCC31
7	BUZZER	1	BUZ1
8	OVERLAY FACIA	1	SWC101
9	FILTER FUSE UNIT	1	BMPC16
10	POWER BOARD	1	BMC332/B
11	3.15 AMP FUSE	1	SWC51
12	MAIN LEAD AND PLUG 230 V (UK)	1	BMC618
	MAIN LEAD AND PLUG 120 V (USA)	1	BMC618/A
	MAIN LEAD AND PLUG 230 V (EU)	1	BMC620
13	SPRING HOOK	3	BMC477
14	ARM SPRING	1	NC36
15	PIVOT BUSH	1	NCC26
16	HANDLE WHEEL	1	BMC507
17	TOGGLE SIDE PLATES	2	NCC24
18	ARM PIVOT PIN	1	NCC15
19	LEVER PIVOT PIN	1	NCC28/A
20	TOGGLE PIVOT PIN	1	NCC14
21	NYLON NUTS	6	-
22	ARM TOGGLE PIN	2	NCC27/A
23	LEVER SIDE PLATES	2	NCC25
24	LEVER HANDLE	1	NCC23
25	HANDLE	2	BMC19/H
26	ARM	1	NCC22
27	INSULATION COVER	1	NCC65
28	THERMAL CUTOUT	1	BM338
29	HEXAGON NUT	12	-
30	CLAMP PLATE	1	NCC63
31	TYPE 'K' THERMO COUPLE	1	FP3057
32	ELEMENT 240V x 400W	1	MP1010
33	HEAT PLATE	1	NCC62
34	PAD PLATE (8 CM x 6.5 CM)	1	NCC619/A
35	PAD PLATE (10 CM x 8 CM)	1	NCC61
36	KNURLED KNOB	1	BMC224
37	PAD PLATE SUPPORT	1	NCC10
38	KNURLED KNOB M6 x 33	1	NCC73
39	SPACER	4	NCC20
40	FACIA PLATE	1	SWC102
41	FRONT BOARD	1	BMC332/A
42	M12 STUDDING	1	STUD1

## 5.4 Electrical Diagram

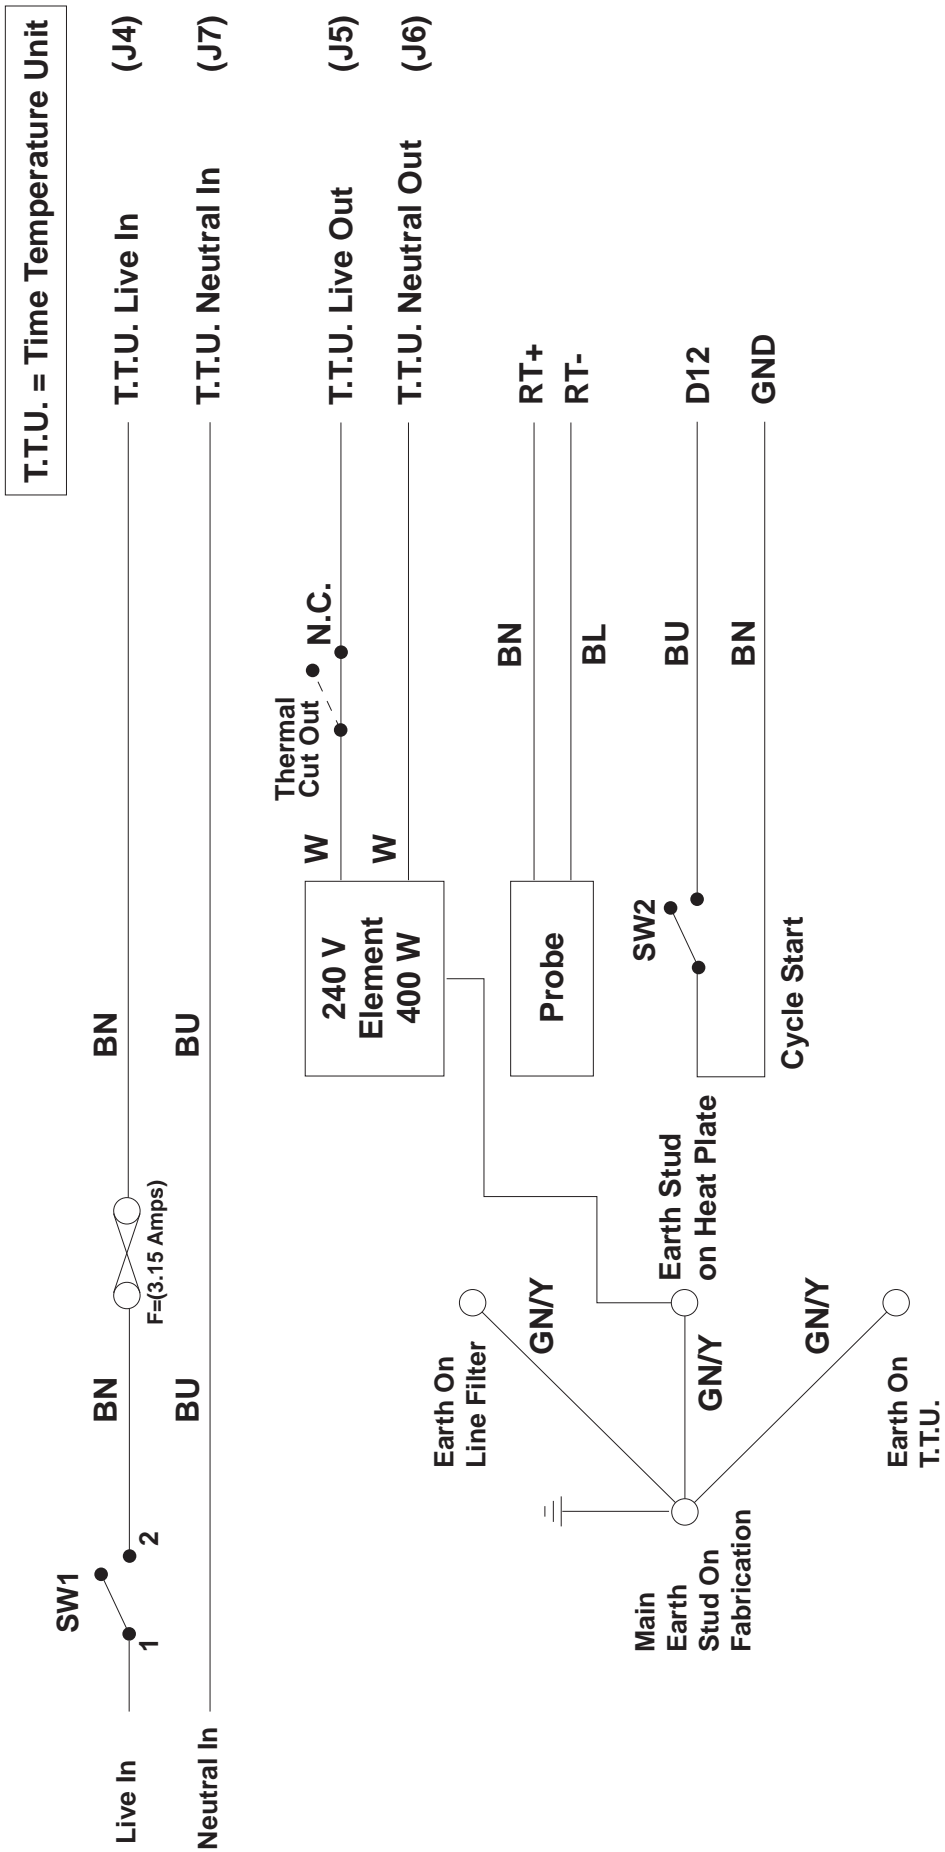

# 5.5 Controller Electrical Diagram

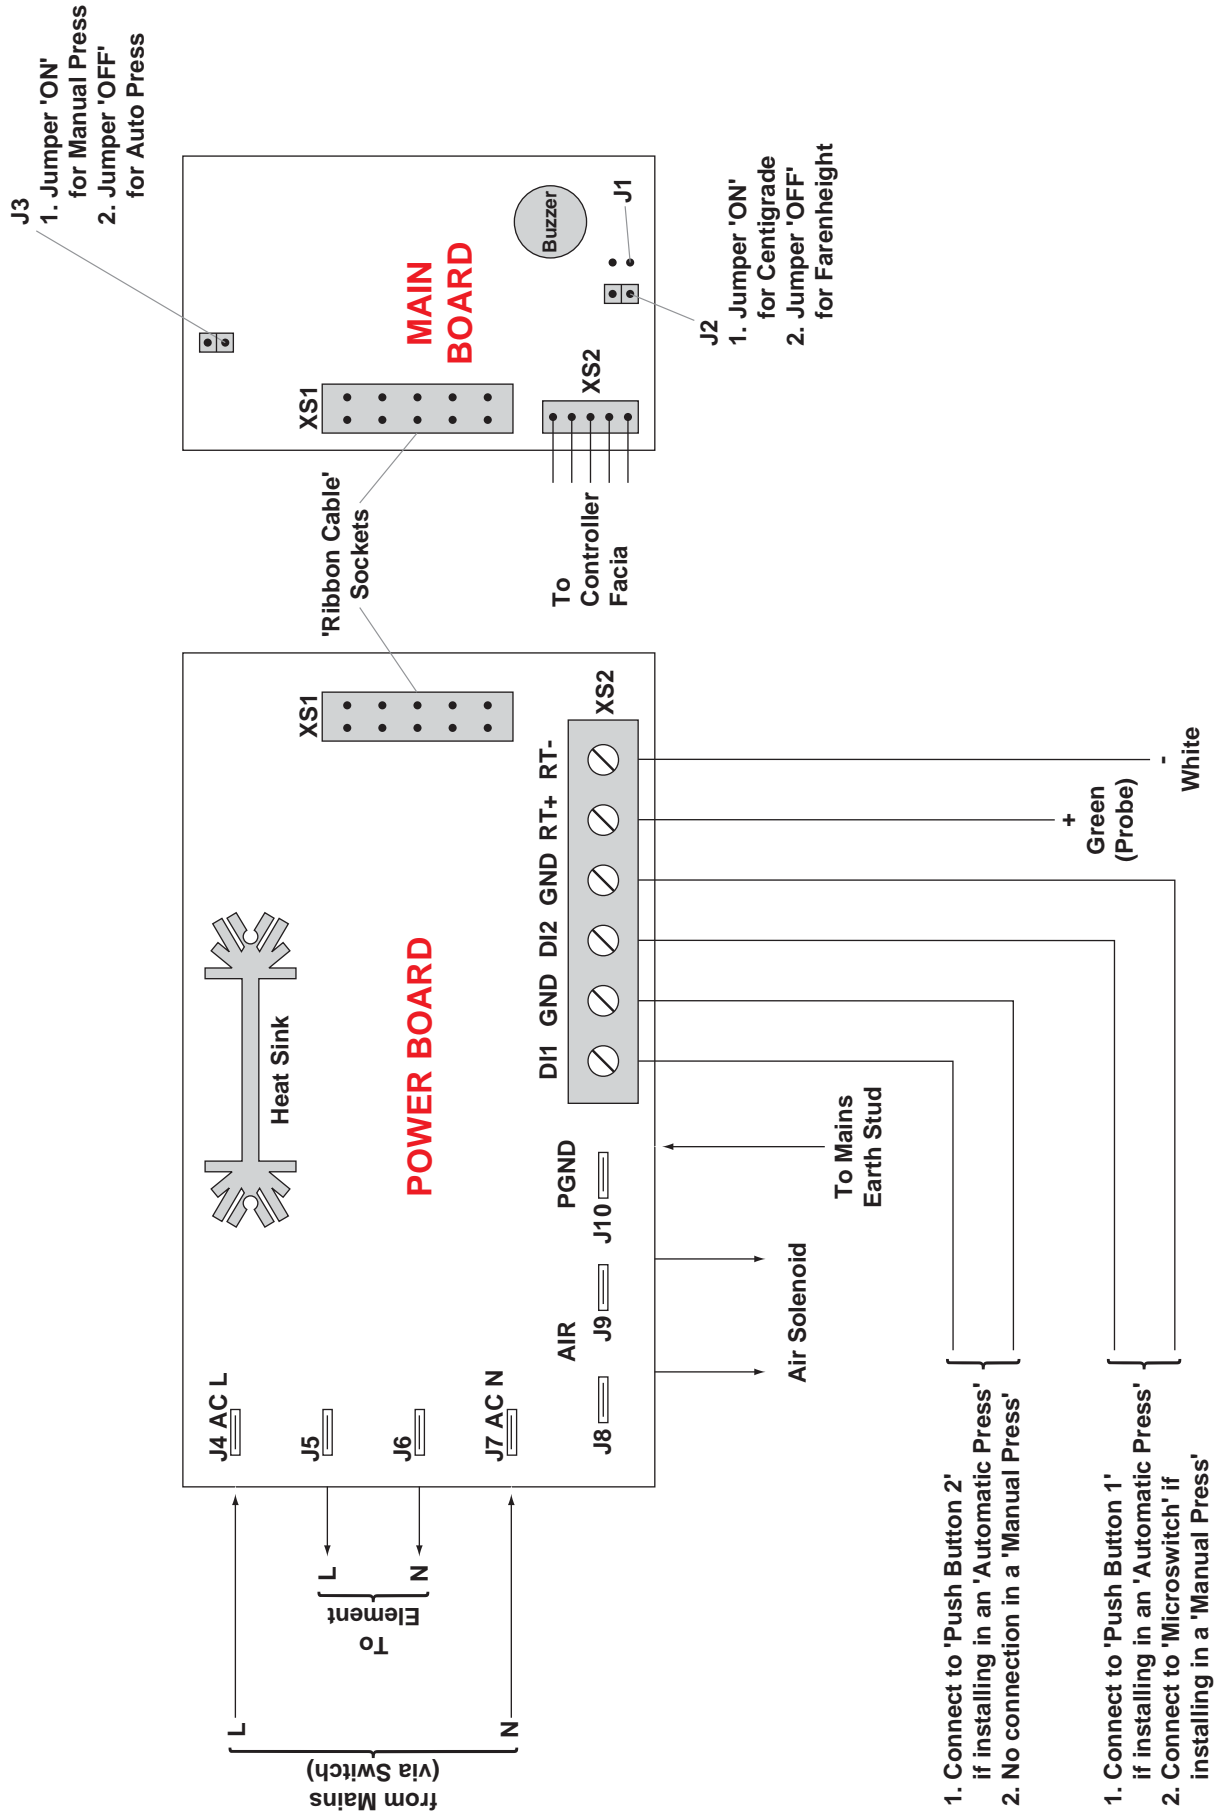

## 6. Design Change

---

**With the policy of constant improvement** and/or modification to meet changing conditions, the right is reserved to change the design and/or specifications at any time without prior notification, and therefore specifications may vary and not be in accordance with this manual.

## 7. Guarantee (Limited Warranty)

---

**A. Adkins & Sons Limited** warrants that the press is free from defects in material and workmanship for a period of 12 months from the date of supply to the customer. The machine comes with a one year warranty on parts and 90 days labour.

**This warranty covers** all parts to repair the defects, except when damage results from misuse or abuse, accident, alteration or negligence or when a machine has been improperly installed.

**If a press covered by warranty** should need to be returned to the factory for examination and repair, if on-site component replacement is not possible, A. Adkins & Sons Limited will make every effort to repair the customers press. The warranty will only be effective when A. Adkins & Sons Limited authorises the original purchaser to return the machine to the factory and only when the product upon examination has proven to be defective.

**Should in our opinion** any part of this press be defective in materials or workmanship, it will be replaced or repaired free of charge, provided that the press has been installed and operated in the correct manner and not subjected to misuse. If A. Adkins & Sons Limited authorise a replacement press, the warranty of the replacement press shall expire on the anniversary date of the original machines invoice to the customer.

**In order for this warranty to be effective**, no return of machine or parts may be made without prior factory authorisation. (This will exclude any travelling and/or carriage costs which will be charged at our discretion).


**This is the sole warranty given by the company**; there are no warranties, which extend beyond the description on the face hereof. The seller disclaims any implied warranty of merchantability and/or any implied warranty of fitness for a particular purpose; the buyer agrees that the goods are sold "as is". A. Adkins & Sons Limited does not warrant that the functions of the press will meet the customer's requirements or expectations. The entire risk as to use, quality and performance of the press lies with the customer. (No claim of any kind shall be greater than the sale price of the product or part to which the claim is made).

**In no event will A. Adkins & Sons Limited** be liable for any injury, loss or damage, including loss of profits, destruction of goods or any special, incidental, consequential or indirect damages arising from the use of the press or accompanying materials. This limitation will apply even if A. Adkins & Sons Limited or its authorised agent had been advised of the possibility of such damage.




**A. ADKINS & SONS LIMITED**  
**DECLARATION OF CONFORMITY**



<p>Application of Council Directives:</p> <p>Standards to which Conformity is Declared:</p>	<p>Machinery, Low Voltage. E.M.C.</p> <p><b><u>BS EN ISO 12100:2010</u></b> - Safety of machinery: Basic Technology, Principles of Design.  <b><u>BS EN 60204-1:2006+A1:2009</u></b> - Safety of machinery: Electrical Equipment of Machines  <b><u>BS EN 60529:1992-A2:2013</u></b> - Degree of protection provided by enclosures.  <b><u>BS EN ISO 13850:2015</u></b> - Safety of Machinery: Emergency Stops.  <b><u>BS EN ISO 141211:2007</u></b> - Safety of Machinery: Principles for Risk Assessment.  <b><u>BS EN 55011:2016+A1:2017</u></b> - Class A Group 2 Equipment - EMC Emissions.  <b><u>BS EN ISO 61000-6-4:2007+A1:2011</u></b> - EMC Conducted Emissions.  <b><u>BS EN ISO 61000-6-2:2005</u></b> - EMC Immunity.</p>
<p>Manufacturer's Name:</p>	<p><b><u>A. Adkins &amp; Sons Limited</u></b></p>
<p>Manufacturer's Address:</p>	<p>High Cross, 18 Lancaster Road,          Hinckley, Leicester, LE10 0AW, United Kingdom.</p>
<p>Type of Equipment:</p>	<p>Beta Pocket Heat Press</p>
<p>Standards Compliance:</p>	
<p>Model Number:</p>	<p>.....</p>
<p>Serial Number:</p>	<p>.....</p>
<p>Year of Manufacture:</p>	<p>.....</p>

I, the undersigned, hereby declare that the equipment specified above conforms to the above directives and standards.

Place: Hinckley, United Kingdom

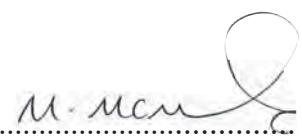Signature: 

Date: .....

Full Name: Marie McMahon  
 Position: General Manager