

How to change a rocker switch

BETA MAJOR/ MINOR

Replacement/ removal of rocker switch

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Remove the four socket head screws, holding the instrument cover in place with a 4 mm allen key (pic 1)
 2. Lift up instrument cover from back of press
 3. Disconnect wiring connected to rocker switch (pic 2), taking note of the connections for future reference when reinstalling
 4. Remove rocker switch from Instrument cover/ facia

Re-installation of replacement rocker switch

1. Installation is a reversal of removal

