

Technical Support

How to change a controller


STUDIO MUG

Replacement/ removal of a controller


- **N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
- **1.** Remove back cover and 4 screws (pic 1)
- **2.** Remove covers from wires by turning in an antclockwise direction (pic 2)
- Untwist wires from each other (pic 3), taking note of their position for future reference when reinstalling
- **4.** Remove controller from cast body (pic 4)
- **5.** Cut cable ties holding cables together (pic 5 arrow-a)
- **6.** Remove micro switch connector from controller by pulling plug upwards (pic 5 arrow-b)
- 7. Remove probe wires using a screwdriver, taking note of their position for future reference when reinstalling (pic 5 arrow-c)
- **8.** Pull wires out from cast body hole (pic 6)

Re-installation of replacement controller

1. Installation is a reversal of removal

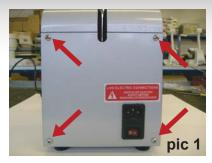



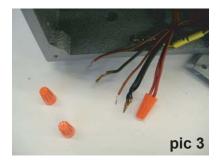







If after following this technical support document you require any further assistance, please open a support ticket using this link: https://aadkins.com/technical-support/ and a member of our technical team will contact you