

# **Technical Support**


# How to change a controller

### **STUDIO CAP**

### Replacement/ removal of a controller

- **N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
- **1.** Remove control box cover and four screws (pic 1)
- **2.** Remove covers from wires by turning in an antclockwise direction (pic 2)
- 3. Untwist wires from each other (pic 3), taking note of their position for future reference when re-installing
- **4.** Cut cable ties holding cables together (pic 4 arrow-a)
- **5.** Remove micro switch connector from controller by pulling plug upwards (pic 4 arrow-b)
- **6.** Remove probe wires using a screwdriver, taking note of their position for future reference when re-installing (pic 4 arrow-c)
- 7. Using a screwdriver lever clips holding controller in place and push out of control box (pic 5)

# pic 1

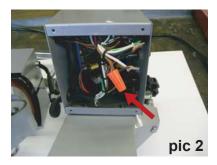


## Re-installation of replacement controller

**1.** Installation is a reversal of removal





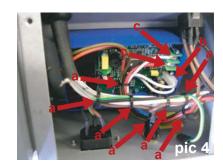

If after following this technical support document you require any further assistance, please open a support ticket using this link: https://aadkins.com/technical-support/ and a member of our technical team will contact you