



**ADKINS**  
HEAT PRESS TECHNOLOGY

# Technical Support

## How to change a fuse holder(s)

## OMEGA SERIES 1000-1001

### Replacement/ removal of fuse holder(s)

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove the four screws securing the instrument box lid and lift off from instrument box (pic 1)
2. Disconnect wires connected to fuse holder(s) (pic 2 arrow-a), taking note of the connections for future reference when reinstalling
3. Using an 18 mm spanner undo locking nuts (pic 2 arrow-b) holding fuse holder(s) to instrument box
4. Pull fuse holder(s) out from hole in instrument box

### Re-installation of replacement fuse holder(s)

1. Installation is a reversal of removal

