



How to change a micro switch

BETA CAP

Replacement/ removal of micro switch

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove four screws from base board (pic 1)
2. Remove base board from casting
3. Remove all wires from micro switch (pic 2 arrow-a)
4. Remove the two screws securing micro switch (pic 2 arrow-b)
5. Lift bracket and micro switch from casting
6. Remove micro switch from bracket, taking note of position for future reference when reinstalling new micro switch

Re-installation of replacement micro switch

1. Installation is a reversal of removal

