

## How to change a micro switch

## STUDIO MUG

### Replacement/ removal of a micro switch

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove base cover and two screws (pic 1)
2. Remove controller from cast body (pic 2)
3. Cut cable ties holding micro switch wires (pic 3 arrow-a)
4. Remove micro switch connector from controller by pulling plug upwards (pic 3 arrow-b)
5. Remove screws securing micro switch (pic 3 arrow-c) and remove from cast body

### Re-installation of replacement micro switch

1. Installation is a reversal of removal

