

Technical Support

How to change a micro switch


BETA SWIFT


Replacement/Removal of Micro Switch

- **N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
- **1.** Remove six screws from base board (pic 1)
- 2. Remove base board from casting
- 3. Remove wires connected to micro switch (pic 2 arrow-a), taking note of the connections for future reference when re-installing new micro switch
- **4.** Unscrew the two screws securing micro switch to casting (pic 2 arrow-b)

Re-installation of replacement micro switch

1. Installation is a reversal of removal

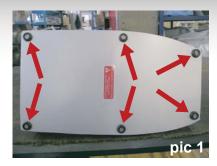

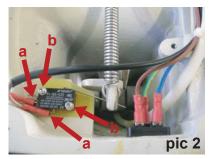

If after following this technical support document you require any further assistance, please open a support ticket using this link: https://aadkins.com/technical-support/ and a member of our technical team will contact you