



How to change a touch pad controller fascia

BETA CAP

Replacement/ removal of controller

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove the four screws from base board (pic 1)
2. Remove base board from casting
3. Remove 7 mm nuts and spacers from the circuit board (pic 2)
4. Lift the circuit board off the bolts, this will reveal the connector (pic 3)
5. Remove the connector from the circuit board (pic 4)
6. Peel the touch pad fascia from the backing plate and then remove the connector through the aperture (pic 5),

Re-installation of replacement controller

1. Installation is a reversal of removal

