



**ADKINS**  
HEAT PRESS TECHNOLOGY

# Technical Support

## How to change the arm springs

## BETA CAP/ POCKET COMBO



### Replacement/ removal of arm springs

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. With lever handle in the up position, remove the arm springs from spring hooks using a pair of long nose pliers (pic 1)
2. Remove springs from arm (pic 2)

### Re-installation of replacement arm springs

1. Installation is a reversal of removal

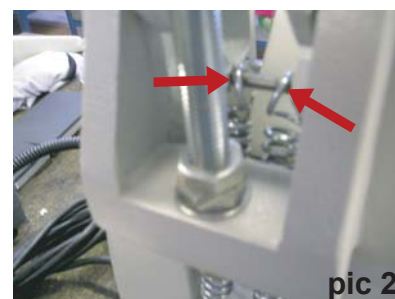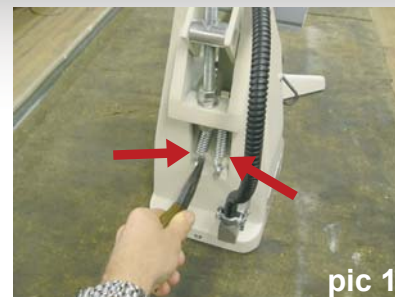

If after following this technical support document you require any further assistance, please open a support ticket using this link: <https://aadkins.com/technical-support/> and a member of our technical team will contact you

All products within the ADKINS range are labelled with CE marking and are manufactured and tested to comply with EC safety regulations.