



## How to change the arm spring(s)

## BETA CAP

### Removal/ replacement of arm spring(s)

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. With lever handle in the up position, remove the arm springs from spring hooks using a pair of long nose pliers (pic 1)
2. Remove springs from arm (pic 2)

### Re-installation of replacement arm spring(s)

1. Installation is a reversal of removal

