

How to change a magnetic switch

STUDIO CLAM 38

Replacement/ removal of a magnetic switch

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Remove rear cover by unscrewing 8 retaining screws (pic 1)
 2. Remove screws securing magnetic switch (pic 2)
 3. Remove magnetic switch wires from main control unit using a screwdriver (pic 3), taking note of their position for future reference when reinstalling
 4. Pull wires out of arm assembly

Re-installation of replacement magnetic switch

1. Installation is a reversal of removal

