



## How to change an on/ off rocker switch

## STUDIO AUTO CLAM SENIOR/ JUNIOR PRESS

### Replacement/ removal of an on/ off rocker switch

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Separate electrical box by unscrewing 4 screws (pic 1 & inset)
  2. Lift the top half of electrical box upwards and pivot towards front of press (pic 2)
  3. Slide on/ off rocker switch out of electrical box (pic 3)
  4. Remove on/ off rocker switch wires (pic 4), taking note of the connections for future reference when reinstalling

### Re-installation of replacement on/ off rocker switch

1. Installation is a reversal of removal

