



How to change a probe

BETA CAP/ POCKET COMBO

Replacement/ removal of probe

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove heat plate assembly plug from socket at rear of press (pic 1)
2. Remove heat plate assembly from press by releasing plunger knob and sliding assembly forward (pic 2)
3. Remove screws holding slide plate cover (pic 3)
4. Remove 10 mm nuts holding slide plate (pic 4)
5. Lift off insulation cover
6. Remove screw holding probe onto heat plate (pic 5)
7. Loosen cable clamps on cable sleeving (pic 6 arrow-a)
8. Remove screw from plug (pic 6 arrow-b) and disconnect probe wires, taking note of the connections for future reference when re-installing
9. Pull probe wire through cable sleeving allowing probe to be removed

Re-installation of replacement probe

1. Installation is a reversal of removal

