




## How to change a reset switch STUDIO AUTO CLAM SENIOR/ JUNIOR PRESS

### Replacement/ removal of a reset switch

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Separate electrical box by unscrewing 4 screws (pic 1 & inset arrow-a)
2. Lift the top half of electrical box upwards and pivot towards front of press (pic 2)
3. Remove reset switch locking ring (pic 1 arrow-b)
4. Pull reset switch out from electrical box location hole
5. Remove reset switch wires (pic 3), taking note of the connections for future reference when reinstalling

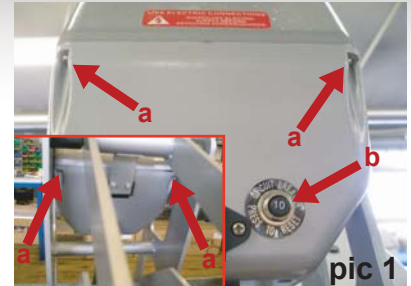

### Re-installation of replacement reset switch

1. Installation is a reversal of removal

