

How to change return spring(s)

STUDIO CLAM 38

Replacement/ removal of return spring(s)

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Remove rear cover by unscrewing 8 retaining screws (pic 1)
 2. Hold heat plate in the up position
 3. Pull spring(s) out of securing holes (pic 2)
 4. Unhook other end of springs from anchor points (pic 3)

Re-installation of replacement return spring(s)

1. Installation is a reversal of removal

