

# **Technical Support**

## How to change a rocker switch

## **BETA MAXI/ MINI**

#### Replacement/ removal of rocker switch

- **N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
- **1.** Remove pin from pressure handwheel using 4 mm punch (pic 1)
- 2. Unscrew handwheel anti clockwise from adjusting stud (pic 2)
- 3. Remove the two socket head screws (front and side) holding the instrument cover, with 4 mm Allen key (pic 3)
- **4.** Lift up instrument cover from the back of press (pic 4)
- 5. Disconnect wires connected to rocker switch taking note of the connections for future reference when reinstalling (pic 4 arrow-a)
- **6.** Push rocker switch out of opening in instrument cover

#### Re-installation of rocker switch

1. Installation is a reversal of removal









If after following this technical support document you require any further assistance, please open a support ticket using this link: https://aadkins.com/technical-support/ and a member of our technical team will contact you