

## How to change the temp/ timer display units

## STUDIO CLAM 38

### Replacement/ removal of the temp/ timer display units

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Remove rear cover by unscrewing 8 retaining screws (pic 1)
  2. Move locking tabs on ribbon cable connection and pull connection out from display unit (pic 2)
  3. Push display unit securing tabs down (pic 3) and remove display unit forward from machine case

### Re-installation of replacement temp/ timer display units

1. Installation is a reversal of removal
- N.B.** Make sure ribbon cable connection is located correctly in display unit

