



How to operate the filter/ regulator and shut-off valve

OMEGA SERIES 1000-1001

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Lift the black knob on filter/ regulator (pic 1 arrow-a)
2. Rotating clockwise turns air pressure up whilst rotating anticlockwise turns air pressure down
3. Place black knob back down when desired pressure is set
4. Sliding shut-off valve to the right turns air pressure off to heat press whilst sliding to the left turns air pressure on to heat press (pic 1 arrow-b)



pic 1