

Technical Support

How to operate the filter/ regulator and shut-off valve

OMEGA SERIES 1000-1001

- **N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
- **1.** Lift the black knob on filter/ regulator (pic 1 arrow-a)
- **2.** Rotating clockwise turns air pressure up whilst rotating anticlockwise turns air pressure down
- 3. Place black knob back down when desired pressure is set
- 4. Sliding shut-off valve to the right turns air pressure off to heat press whilst sliding to the left turns air pressure on to heat press (pic 1 arrow-b)



If after following this technical support document you require any further assistance, please open a support ticket using this link: https://aadkins.com/technical-support/ and a member of our technical team will contact you