



ADKINS
HEAT PRESS TECHNOLOGY

Technical Support

How to operate the flow regulator

OMEGA SERIES 1000-1001

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Unlock locking nut on flow regulator (pic 1)
2. Rotate flow regulator both clockwise and anticlockwise, until a smooth movement is achieved when the heat plate is going up and down (whilst press is being operated)
3. Rotating flow regulator anticlockwise speeds up movement whilst clockwise rotation slows down movement



If after following this technical support document you require any further assistance, please open a support ticket using this link: <https://aadkins.com/technical-support/> and a member of our technical team will contact you

All products within the ADKINS range are labelled with CE marking and are manufactured and tested to comply with EC safety regulations.