



How to recalibrate a controller

STUDIO CLAM 38



1. Press the Mode button until PASS shows on the display.
2. Press the up button until number 88 shows on the display.
3. Press the Mode button several times until HS shows on the display.
4. There should then be a number under HS on the display.
5. You can now use either the up or down button to change this number to recalibrate the controller.
6. After those adjustments have been made press the Mode button until the display returns to normal.