



## How to recalibrate controller

## BETA MAXI/ MINI



1. Press the up or down buttons to change the display to “adj” (which will flash).
2. Change the temperature using the up or down buttons until the controller reads the same temperature as the thermometer.
3. Press the mode button and cycle through the settings back to the actual temperature.