
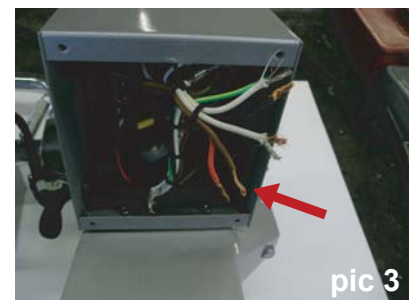
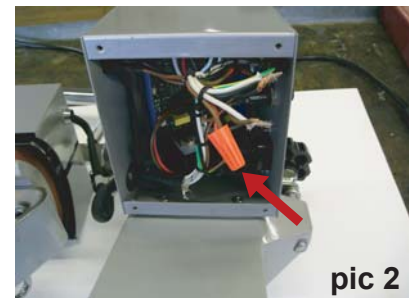


## How to change a controller

## STUDIO CAP

### Replacement/ removal of a controller

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Remove control box cover and four screws (pic 1)
  2. Remove covers from wires by turning in an anticlockwise direction (pic 2)
  3. Untwist wires from each other (pic 3), taking note of their position for future reference when re-installing
  4. Cut cable ties holding cables together (pic 4 arrow-a)
  5. Remove micro switch connector from controller by pulling plug upwards (pic 4 arrow-b)
  6. Remove probe wires using a screwdriver, taking note of their position for future reference when re-installing (pic 4 arrow-c)
  7. Using a screwdriver lever clips holding controller in place and push out of control box (pic 5)

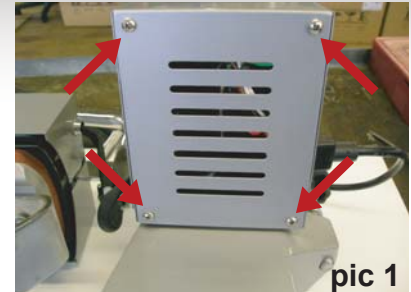

### Re-installation of replacement controller

1. Installation is a reversal of removal

