

Technical Support

How to change a green button controller


BETA SWIFT

Replacement/ removal of controller

- **N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
- **1.** Remove six screws from base board (pic 1)
- 2. Remove base board from casting
- 3. Remove wires connected to controller (pic 2), taking note of the connections for future reference when re-installing new controller
- **4.** Remove the two dome nuts securing controller to fascia (pic 3)

Re-installation of replacement controller

1. Installation is a reversal of removal

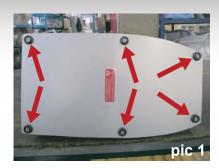





If after following this technical support document you require any further assistance, please open a support ticket using this link: https://aadkins.com/technical-support/ and a member of our technical team will contact you